




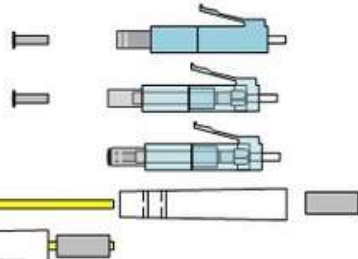


Optistar Connector Kit Contents

Product Code : CLCCKSMS


	Boot	1x
	Crimping Sleeve	1x
	Fibre Guide	1x
	Connector Body	1x
	Dust Cap	1x

Instructions for use




Step 1:

Slide the Fibre Guide into the Connector Body ensuring that it correctly enters plastic insert inside the Connector Body. Slide the Boot and crimping sleeve over the fibre you wish to terminate, narrow end first as shown. Then strip the fibre jacket aramid yarn and buffer the appropriate amount leaving about 3mm of aramid yarn on exposed. After removing the buffer ensure to clean the fibre end to remove any remnants of the buffer.
DO NOT TOUCH THE FIBRE AFTER CLEANING.

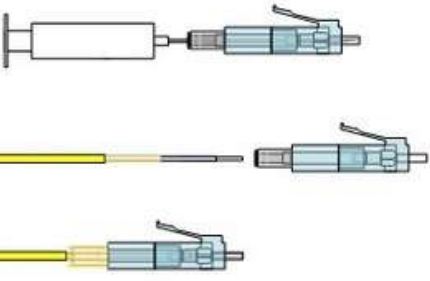


Step 2:

You are now free to use your desired adhesive for termination please ensure to follow the directions provided with your adhesive carefully. After the adhesive has been injected slide in the fibre cable having the aramid yarn cover the metal part of the connector body.

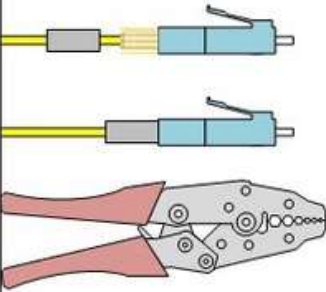


Step 3:

Now slide the Crimping Sleeve on over the aramid yarn until it stops. Take your hex crimper tool and using the (insert size here) hex slot crimp the sleeve onto the connector at the base of the connector body. Please wait for the adhesive to cure sufficiently before progressing to the next step.

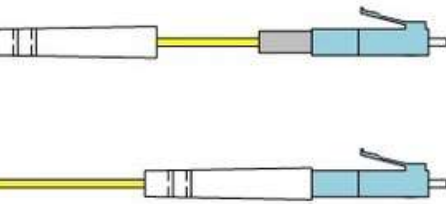

Step 4:

Finally slide the boot up to the connector over the now crimped sleeve make sure that it is secured firmly

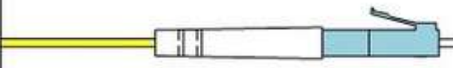

Step 5:

To finish please follow the cleave and polish instructions for your chosen adhesive carefully. Once the fibre is successfully terminated apply the dust cap to the connector to protect it from dust and damage.