






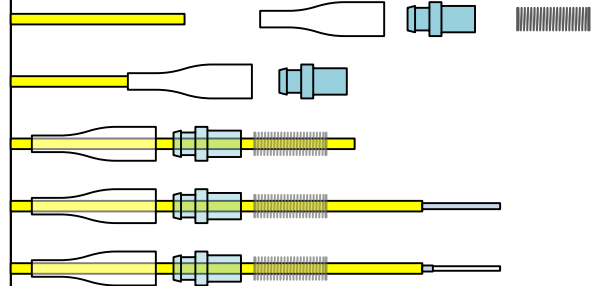


# LC Connector Kit Contents

Product Code : LCCKSMS


	Boot	1x
	Connector End	1x
	Seal	1x
	Spring	1x
	Ferrule Body	1x
	Connector Front	1x
	Dust Cap	1x

# Instructions for use




Step 1:

Slide the boot, spring and connector end over the fibre you wish to terminate narrow end first as shown. Then strip the fibre jacket and buffer the appropriate amount. After removing the buffer ensure to clean the fibre end to remove any remnants of the buffer.  
**DO NOT TOUCH THE FIBRE AFTER CLEANING.**

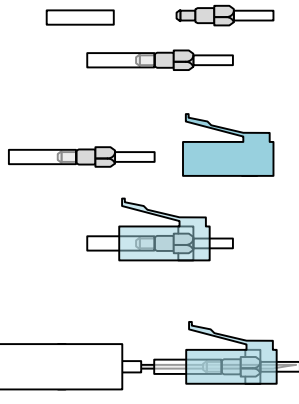


Step 2:

Attach the seal to the end of the Ferrule Body as shown then insert the Ferrule body into the Connector Front as far as it will go. You are now free to use your desired adhesive for termination please ensure to follow the directions provided with your adhesive carefully.

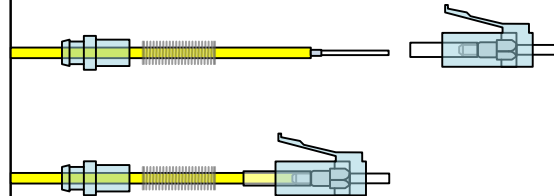


Step 3:

After the adhesive has been injected slide in the fibre cable, please wait for the adhesive to cure sufficiently before progressing to the next step.

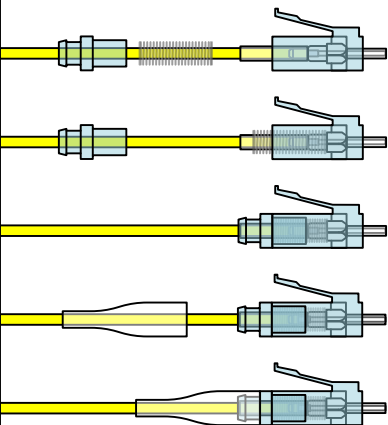

Step 4:

Now slide the spring in all the way followed by the connector end, pushing the connector end and connector front together till they are clipped securely, and finally slide the boot up to the connector end and push the boot and connector together until they are clipped securely.

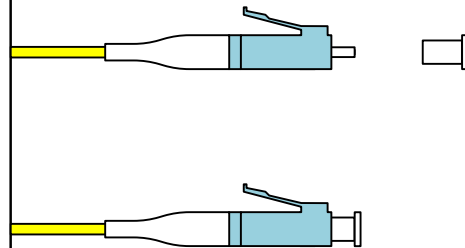

Step 5:

To finish please follow the cleave and polish instructions for your chosen adhesive carefully. Once the fibre is successfully terminated apply the dust cap to the connector to protect it from dust and damage.